

Installation Instructions for Model: VPC-4

Exhaust Vent Cap for venting Pipes through the roof

Step 1:

After you have removed the old head, slide the replacement head over the existing collar.



Step 2:

Observe the screws located on top of the vent. Use this as your pattern to attach the vent to the collar. [Tolerance: 1/2"]




Step 3:

With the cap adaptor in place, use the provided #8 self-tapping screws [3 in total] to secure the base.



Vent Pipe Cap installed on Pipe

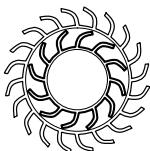

Active Ventilation Products, Inc.

311 First Street, Newburgh, NY 12550-4857

800-ROOF VENT (766-3836) Ph: 845-565-7770 Fax: 845-562-8963

Website: roofvents.com Email: sales@roofvents.com

5778-8