


ROOF VENT EXHAUST (ONLY) PLACEMENT INSTRUCTIONS

- For Roof Vents with Collar Heights 1", 2", or 4".
- Install exhaust vents 6 to 24 inches maximum down from the peak of the roof.
- Evenly space vents across the length of the roof.
- Never cut into a roof rafter when installing the vent.
- Adjust placement of vent to either side of roof rafter.
- Make sure that the sticker on the lid of the vent points up towards the ridge of the roof.
- Confirm whether the IBC rule 1/300 OR 1/150 Application per Square Foot is required.
- Please call Active Ventilation Products at 800-roofvent (800-766-3836) or email sales@roofvents.com for technical support and application questions.



Placement of vents should be evenly spaced across the length of the roof.

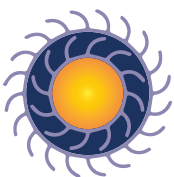

ACTIVE VENTILATION PRODUCTS, INC.

800-roofvent 800-766-3836

roofvents.com • sales@roofvents.com • 845-565-7770