
Installation Instructions for Model: ASF-6-PVC

Solar Exhaust Vent Cap for schedule 40 or 80 PVC Pipe

Step 1:
After you have removed the old head, slide the replacement head over the existing collar.

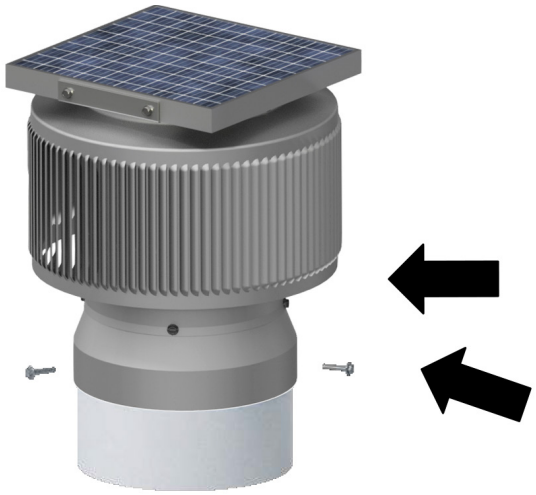

Step 2:
Observe the screws located on top of the vent. Use this as your pattern to attach the vent to the collar. [Tolerance: 1/2”]



Step 3:
With the PVC adaptor cap in place, use #8 self-tapping screws [3 in total] to secure the base.



Aura Solar Fan PVC installed on PVC Pipe



Active Ventilation Products Inc

800-Roof-Vent (766-3836) • 845-565-7770
roofvents.com • sales@roofvents.com