


Installation Instructions for GZL-3

"Sleek protections for your home. This low-profile roof jack can be installed on roof pitches 2/12 and up. Features a built-in damper and an easy-to-clean, removable stainless-steel screen."


Step 1:

Turn the vent upside down and make a cardboard template of the flange. The template should be 9" wide by 9" long with a 3 $\frac{1}{4}$ " hole in the middle.

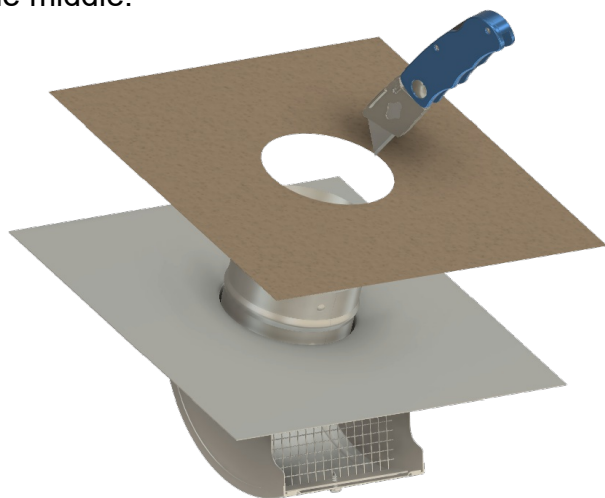

Step 2:

Using the template trace the hole and outline onto the roof as shown.

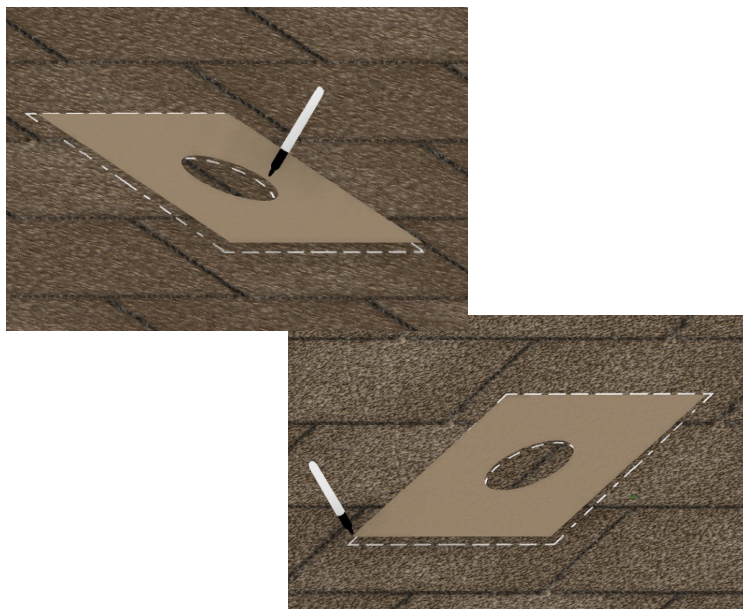


Step 3:

Remove cardboard template to show square and circle patterns.



Step 4:

Using 3.25" hole saw cut out the round hole in the roof deck and remove debris.

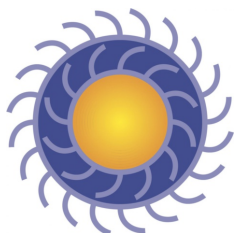

Active Ventilation Products, Inc.

311 First Street, Newburgh, NY 12554-4857

800-ROOF VENTS (766-3836) Ph: 845-565-7770 Fax: 845-562-8963

Website: roofvents.com Email: sales@roofvents.com

Installation Instructions for GZL-3

"Sleek protections for your home. This low-profile roof jack fits pitches 2/12 and up, features a built-in damper and an easy-to-clean, removable stainless-steel screen."

Step 5:

Cut out a 4" x 4" section of the outer shingle around the the hole for the vent to sit.



Step 6:

Once all cutting is done reach into the attic and pull the duct up through the hole.




Step 7:

Insert the bottom of the tail pipe into the flex duct and secure with a zip tie or clamp.



Step 8:

Apply roofing sealant on the underside of flange along all four edges as shown.

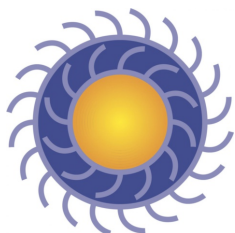

Active Ventilation Products, Inc.

311 First Street, Newburgh, NY 12554-04857

800-ROOF VENTS (766-3836) Ph: 845-565-7770 Fax: 845-562-8963


Website: roofvents.com Email: sales@oofvents.com

Installation Instructions for GZL-3

"Sleek protections for your home. This low-profile roof jack fits pitches 2/12 and up, features a built-in damper and an easy-to-clean, removable stainless-steel screen."

Step 9:

Push flex duct back into attic, then lift upper shingles to insert the flange underneath.

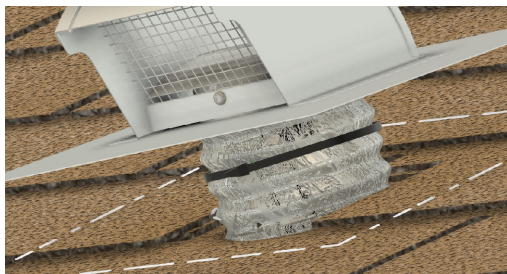


Step 10:

With the vent in place secure the flange to the roof using nails. Apply sealant to back corners of vent, on top of nails and around under shingles, following pattern shown in Step 11.





Step 11:

Install nails following pattern bellow.

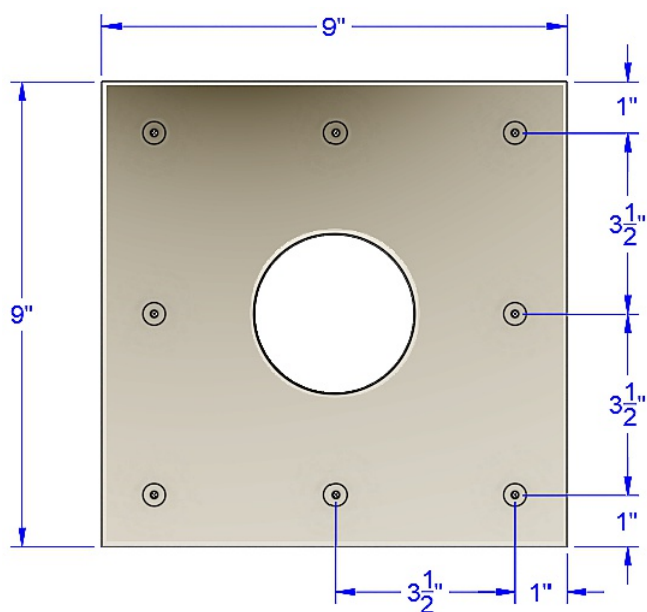

Step 12:

This is how the Gendlz Goose Neck Roof Jack Vent should look when installed.

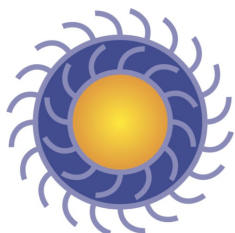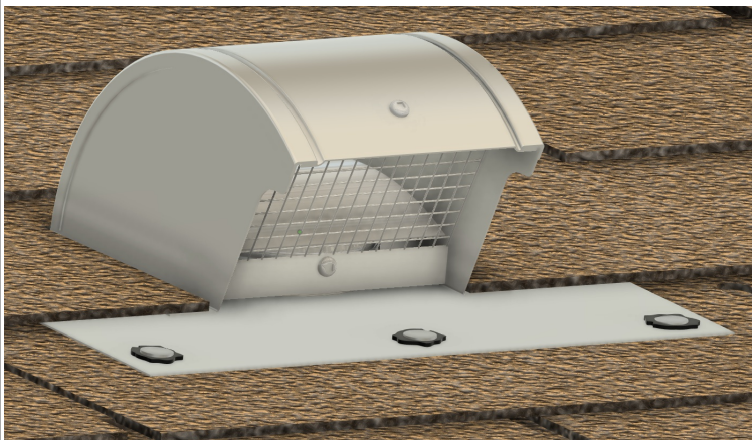

Active Ventilation Products, Inc.

311 First Street, Newburgh, NY 12554-4857

800-ROOF VENTS (766-3836) Ph: 845-565-7770 Fax: 845-562-8963

Website: roofvents.com Email: sales@oofvents.com