


Rounded Corner option



Keepa Vent - an Attic Roof Vent

Model: KV-10 Diameter: 10"

Drawing not to scale

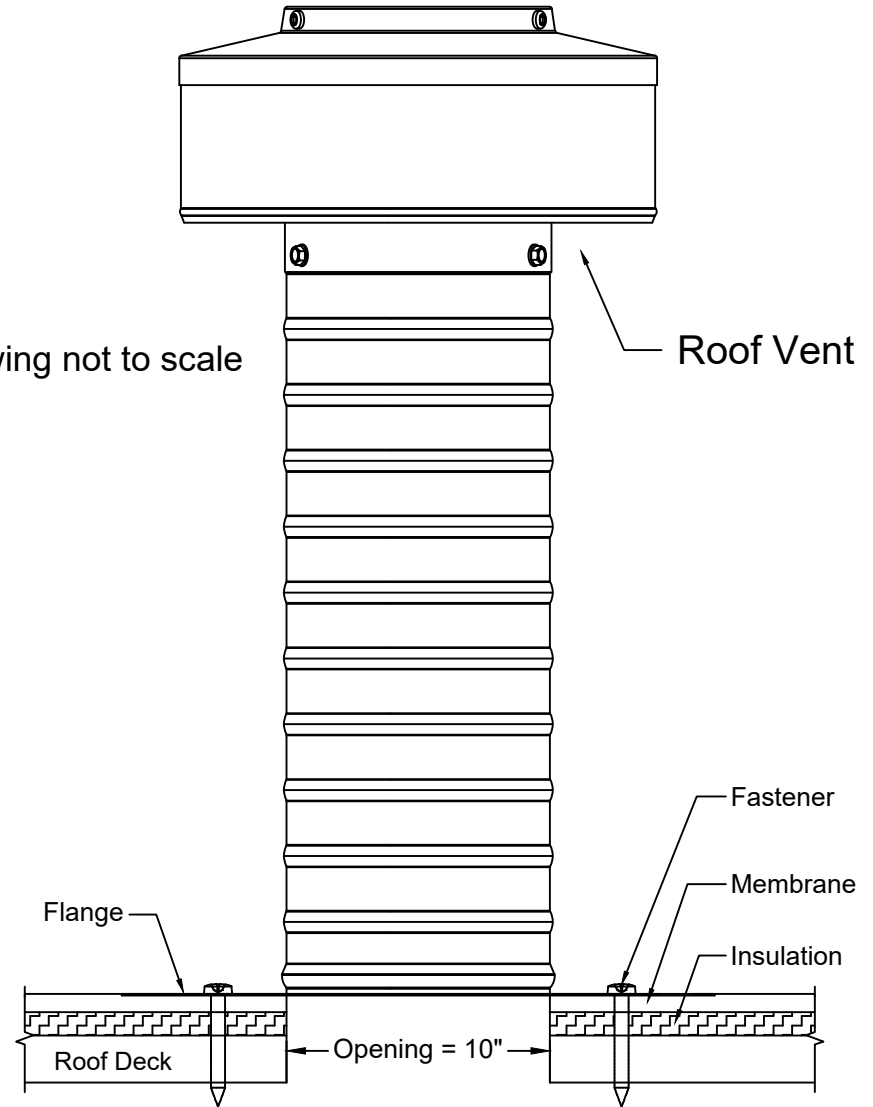


**Keepa Attic Vent
Detailed Installation Instructions**

1. Cut a circular hole 10" in diameter in the roof deck. Remove all debris.
2. Apply sealant to the underside of the flange, then place vent down.
3. Screw* vent onto roof deck, following the pattern as shown.
4. Seal all seams and screws with an approved roofing sealant

Recommended installation screw: **Flat, Bugle or Wafer Head*

#10 x 1 1/2" Steel Wood Screw, Type A Point

Total number of screws needed = 12 (screws not included)

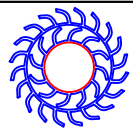

Active Ventilation Products, Inc.

Visit us: roofvents.com

Email us: sales@roofvents.com

9/14/2023