




## **Curb Mount Flange Installation Detail**

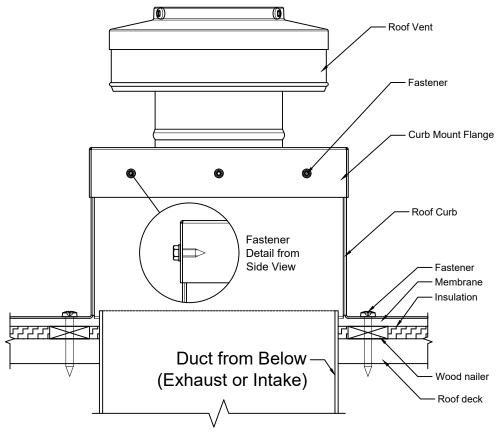

## **Curb Mount Flange Installation Instructions**

- 1. Slide Curb Mount Flange onto the Roof Curb.
- 2. Attach Curb Mount Flange to Roof Curb using screws.
- 3. Recommended installation screw: **Flat, Bugle or Wafer Head** #10 x 1/2" Sheet Metal Screw, Type A Point
- 4. Total number of screws needed for CMF = 12 (screws not included)

## Keepa Attic Vent with Curb Mount Flange Model: KV-9-CMF



**Active Ventilation Products, Inc.** 

9/1/2023