


# Installation Instructions for RBV-5-C4-TP-SM-rib

*"A low profile roof jack vent for R-Panel metal roofs such as SM-Rib, Tuff-Rib, Panel-Loc Plus & Master Rib"*


## Step 1:

Turn the vent upside down and make a cardboard template of the flange. The template should be 7 1/2" wide and 12" long with a 5 1/4" hole in the middle.

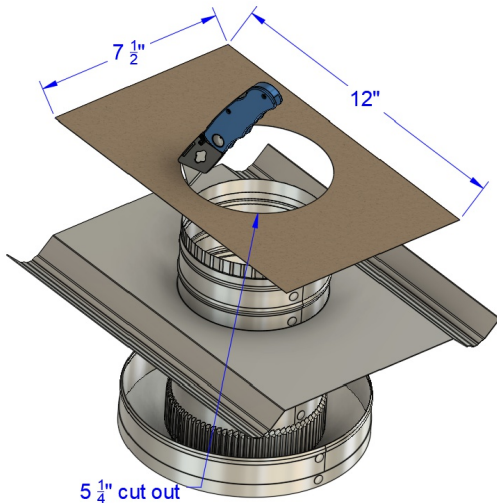


## Step 2:

Using the template trace the hole and outline onto the roof panel centered in between the ribs. The roof jack vent should be installed no more than 4ft from ridge cap.

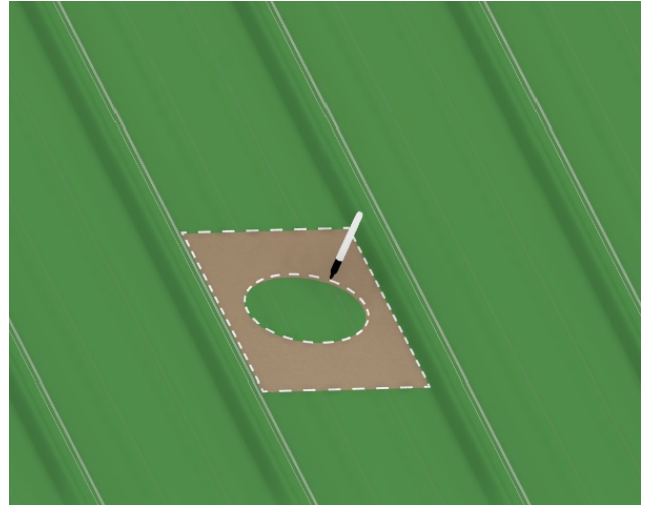



## Step 3:

Using nibbler, snips or hole saw cut 5.25" hole in roof panel and remove all debris.

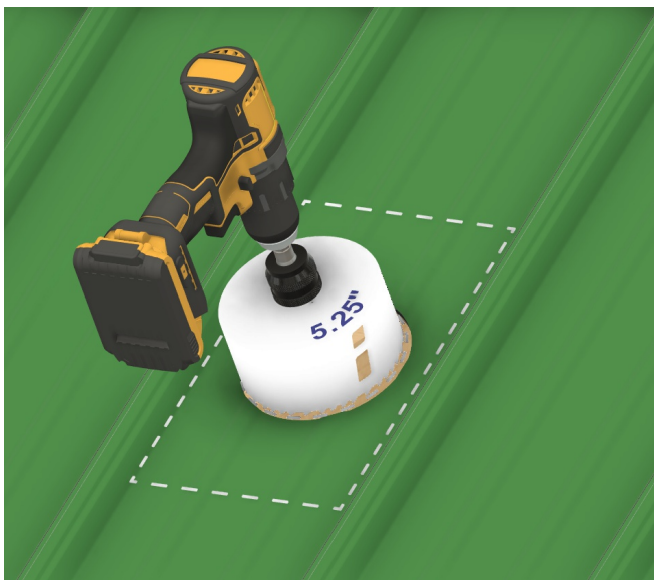

## Step 4:

Place 3/4" butyl tape on all four sides of the flange. The tape should overlap at each corner.

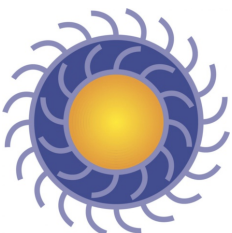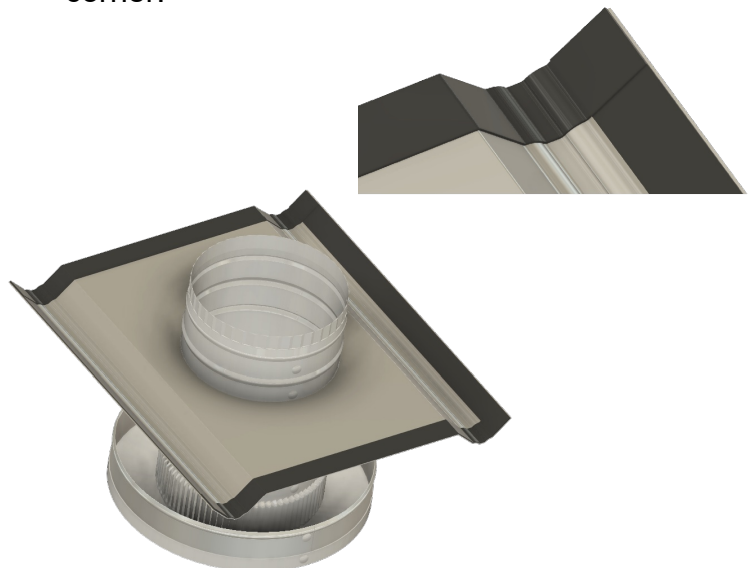

## Active Ventilation Products, Inc.

311 First Street, Newburgh, NY 12554-04857

800-ROOF VENTS (766-3836) Ph: 845-565-7770


Website: [roofvents.com](http://roofvents.com) Email: [sales@roofvents.com](mailto:sales@roofvents.com)

# Installation Instructions for RBV-5-C4-TP-SM-rib

*"A low profile roof jack vent for R-Panel metal roofs such as SM-Rib, Tuff-Rib, Panel-Loc Plus & Master Rib"*

## Step 5:

Pull up the duct through the hole and insert the bottom of the tail pipe into the flex duct then secure with a zip-tie or clamp. Install roof jack vent so that the flange aligns with template marks.

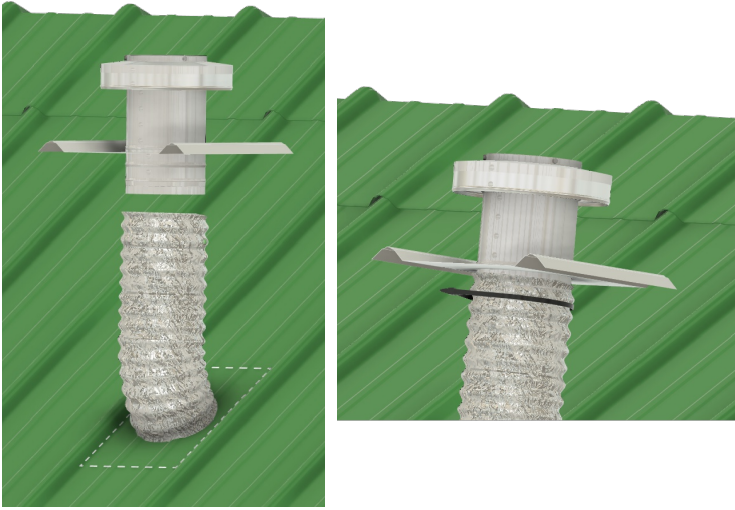


## Step 6:

Use #10 self tapping screws with rubberized washers to secure the flange to the roof following the pattern shown in **Step 7**.





## Step 7:

Install screws as shown below. Qty 16

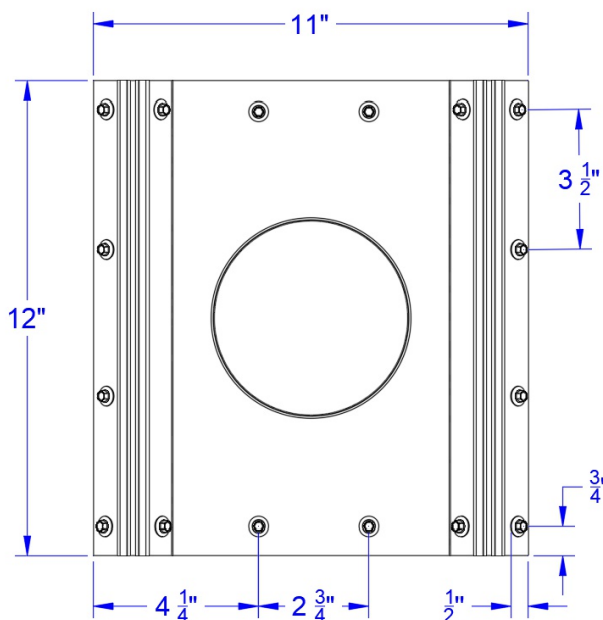

## Step 8:

This is how the Round Back Roof Jack Vent should look when finished.

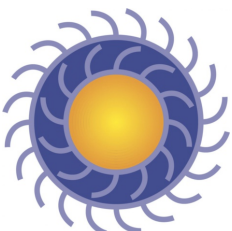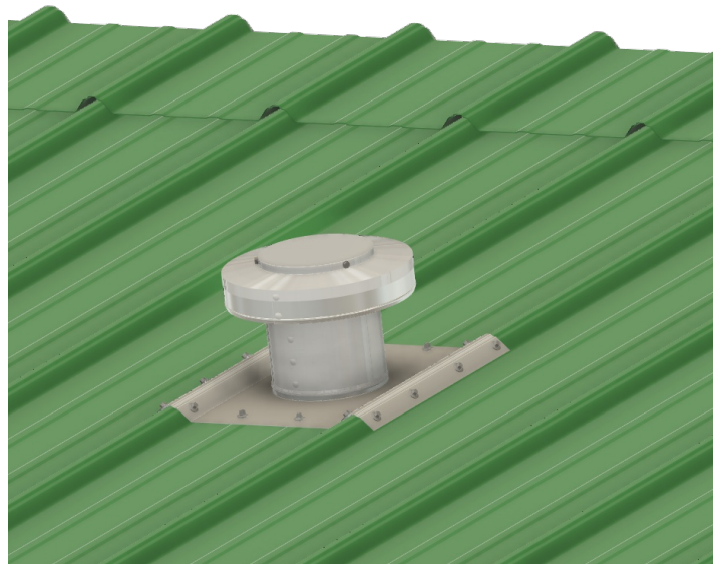

## Active Ventilation Products, Inc.

311 First Street, Newburgh, NY 12554-4857

800-ROOF VENTS (766-3836) Ph: 845-565-7770

Website: [roofvents.com](http://roofvents.com) Email: [sales@oofvents.com](mailto:sales@oofvents.com)