

Installation Instructions for Model: TVC-2.5-PVC

Vent Cap for a schedule 40 or 80 PVC Pipe

Step 1:

After you have removed the old head, slide the replacement head over the existing collar.



Step 2:

Observe the screws located on top of the vent. Use this as your pattern to attach the vent to the collar. [Tolerance: 1/2"]




Step 3:

With the PVC adaptor cap in place, use #8 x 1/2 inch self-drilling sheet metal screws [3 in total] to secure the base.



Tubi Vent Pipe Cap installed on PVC Pipe

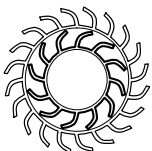

Active Ventilation Products, Inc.

311 First Street, Newburgh, NY 12550-4857

800-ROOF VENT (766-3836) Ph: 845-565-7770 Fax: 845-562-8963

Website: roofvents.com Email: sales@roofvents.com

5778-8