

# Installation Instructions for Model: TVC-4-PVC

## Vent Cap for a schedule 40 or 80 PVC Pipe

### Step 1:

After you have removed the old head, slide the replacement head over the existing collar.



### Step 2:

Observe the screws located on top of the vent. Use this as your pattern to attach the vent to the collar. [Tolerance: 1/2"]




### Step 3:

With the PVC adaptor cap in place, use #8 x 1/2 inch self-drilling sheet metal screws [ 3 in total ] to secure the base.



Tubi Vent Pipe Cap installed on PVC Pipe

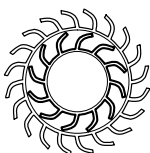

**Active Ventilation Products, Inc.**

311 First Street, Newburgh, NY 12550-4857

800-ROOF VENT (766-3836) Ph: 845-565-7770 Fax: 845-562-8963

Website: [roofvents.com](http://roofvents.com) Email: [sales@roofvents.com](mailto:sales@roofvents.com)

5778-8