



Installation Instructions for the UV-45

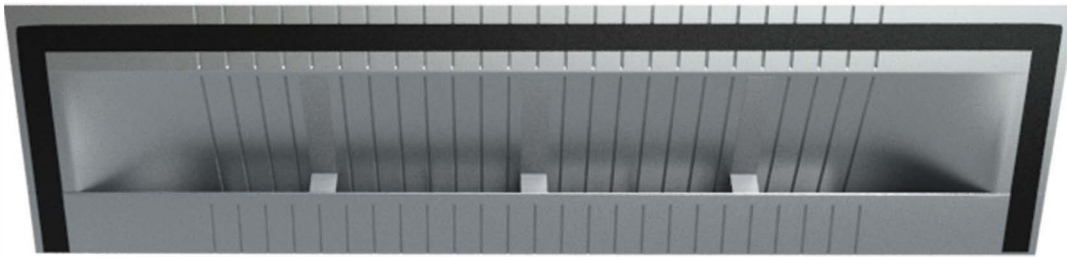

Step 2:

Apply roofing grade sealant to the underside of the top and side flanges. Never put sealant on the bottom flange.

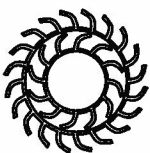

Active Ventilation Products, Inc.

311 First Street, Newburgh, NY 12550-4857

800-ROOF VENT (766-3836) Ph: 845-565-7770 Fax: 845-562-8963

Website: roofvents.com Email: sales@roofvents.com


5777-10

Installation Instructions for the UV-45



Step 4:

When the UV is in its final position the top flange should be under the shingles, and the bottom flange should be on top of the shingles to ensure drainage.

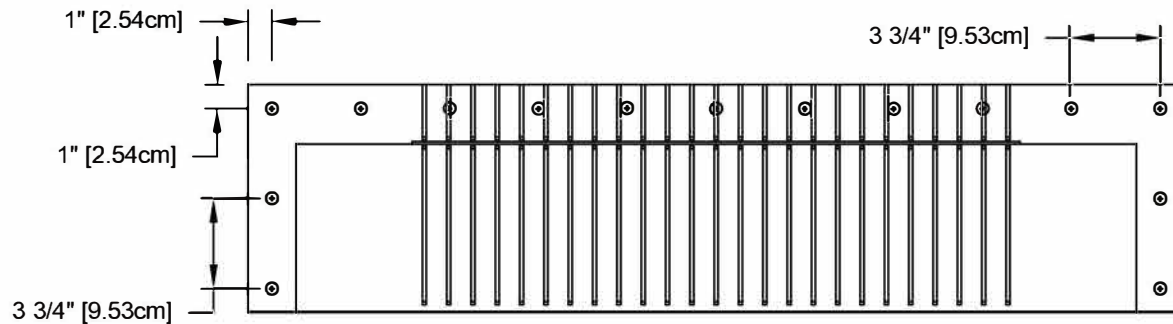

Step 5:


Required screw #10 x 1.5" steel sheet metal screw. With the vent in place secure the flange to the shingle roof using a screw gun or drill. All installation screws are placed at 1" from edge. Number of screws required: 15



Step 6:

This is how the vent should look when installed.

Note: If installing multiple vents on roof each vent should be placed at least 12 inches apart.

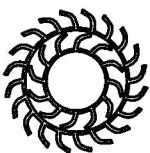

Active Ventilation Products, Inc.

311 First Street, Newburgh, NY 12550-4857

800-ROOF VENT (766-3836) Ph: 845-565-7770 Fax: 845-562-8963

Website: roofvents.com Email: sales@roofvents.com

5777-10