

# Installation Instructions for Model: ASF-12-PVC

Solar Exhaust Vent Cap for schedule 40 or 80 PVC Pipe


## Step 1:

After you have removed the old head, slide the replacement head over the existing collar.



## Step 2:

Observe the screws located on top of the vent. Use this as your pattern to attach the vent to the collar. [Tolerance: 1/2"]


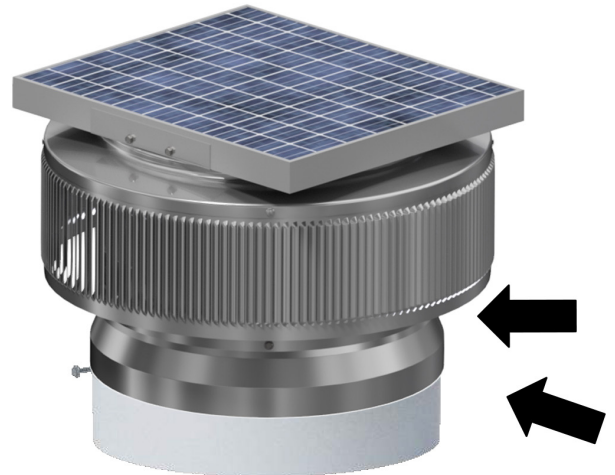


## Step 3:

With the PVC adaptor cap in place, use the provided #8 self-tapping screws [ 4 in total ] to secure the base.



Aura Solar Fan PVC installed on PVC Pipe

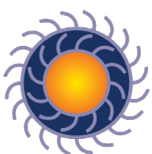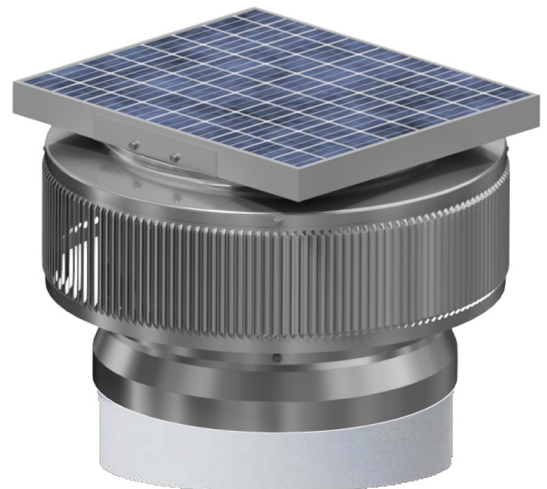

**Active Ventilation Products Inc**

800-Roof-Vent (766-3836) • 845-565-7770

roofvents.com • sales@roofvents.com

