




Round Back Roof Vent

Model: RBV-4-C2 Diameter: 4" Collar Height: 2"



1/25/2024

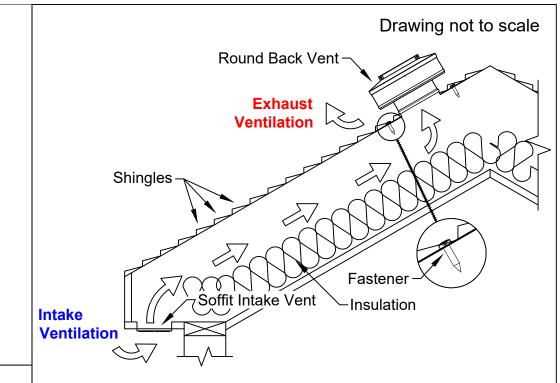

Round Back Roof Vent Detail & Installation Instructions

- Cut a circular hole 4" in diameter in the roof deck.
 Remove all debris.
- 2. Apply sealant to the underside of the flange, then place vent down.
- 3. Screw* vent onto roof deck, following the pattern as shown.
- 4. Seal all seams and screws with an approved roofing sealant

*Recommended installation screw: **Flat, Bugle or Wafer Head** #10 x 1 1/2" Steel Wood Screw, Type A Point

Total number of screws needed = 8 (screws not included)