




Round Back Roof Vent Model: RBV-6-C2 Diameter: 6" Collar Height: 2"



Email us: sales@roofvents.com

1/25/2024

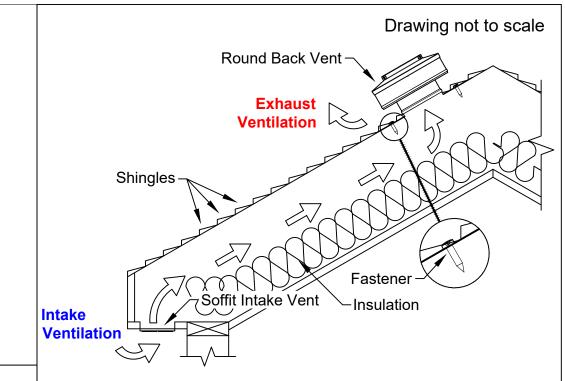

Round Back Roof Vent Detail & **Installation Instructions**

- Cut a circular hole 6" in diameter in the roof deck. Remove all debris.
- Apply sealant to the underside of the flange, then place vent down.
- Screw* vent onto roof deck, following the pattern as shown.
- Seal all seams and screws with an approved roofing sealant

*Recommended installation screw: Flat, Bugle or Wafer Head #10 x 1 1/2" Steel Wood Screw, Type A Point

Total number of screws needed = 8 (screws not included)