Universal Vent Installation Instructions

1. Cut a rectangular slot 2.5" x 40". DO NOT cut roof rafters.
   a. For Exhaust: Place 8" to 24" from the ridge
   b. For Intake: Place 12" to 36" from the eave
2. Apply sealant to underside of the flanges.
3. Slide upper flange under shingles. Make sure to align the ribs of the vent with the opening. If installing multiple vents, each vent should be at least 12" apart.
4. Recommended installation screw: #10 x 1 1/2" Sheet Metal Screw
5. Total number of screws needed = 14
6. Screws not included.

Universal Vent Flashing Detail

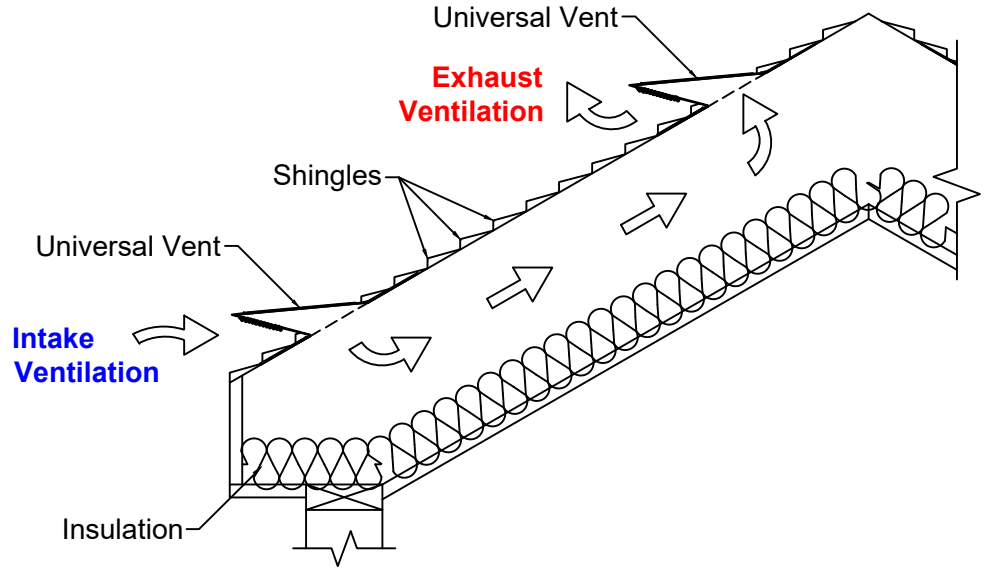

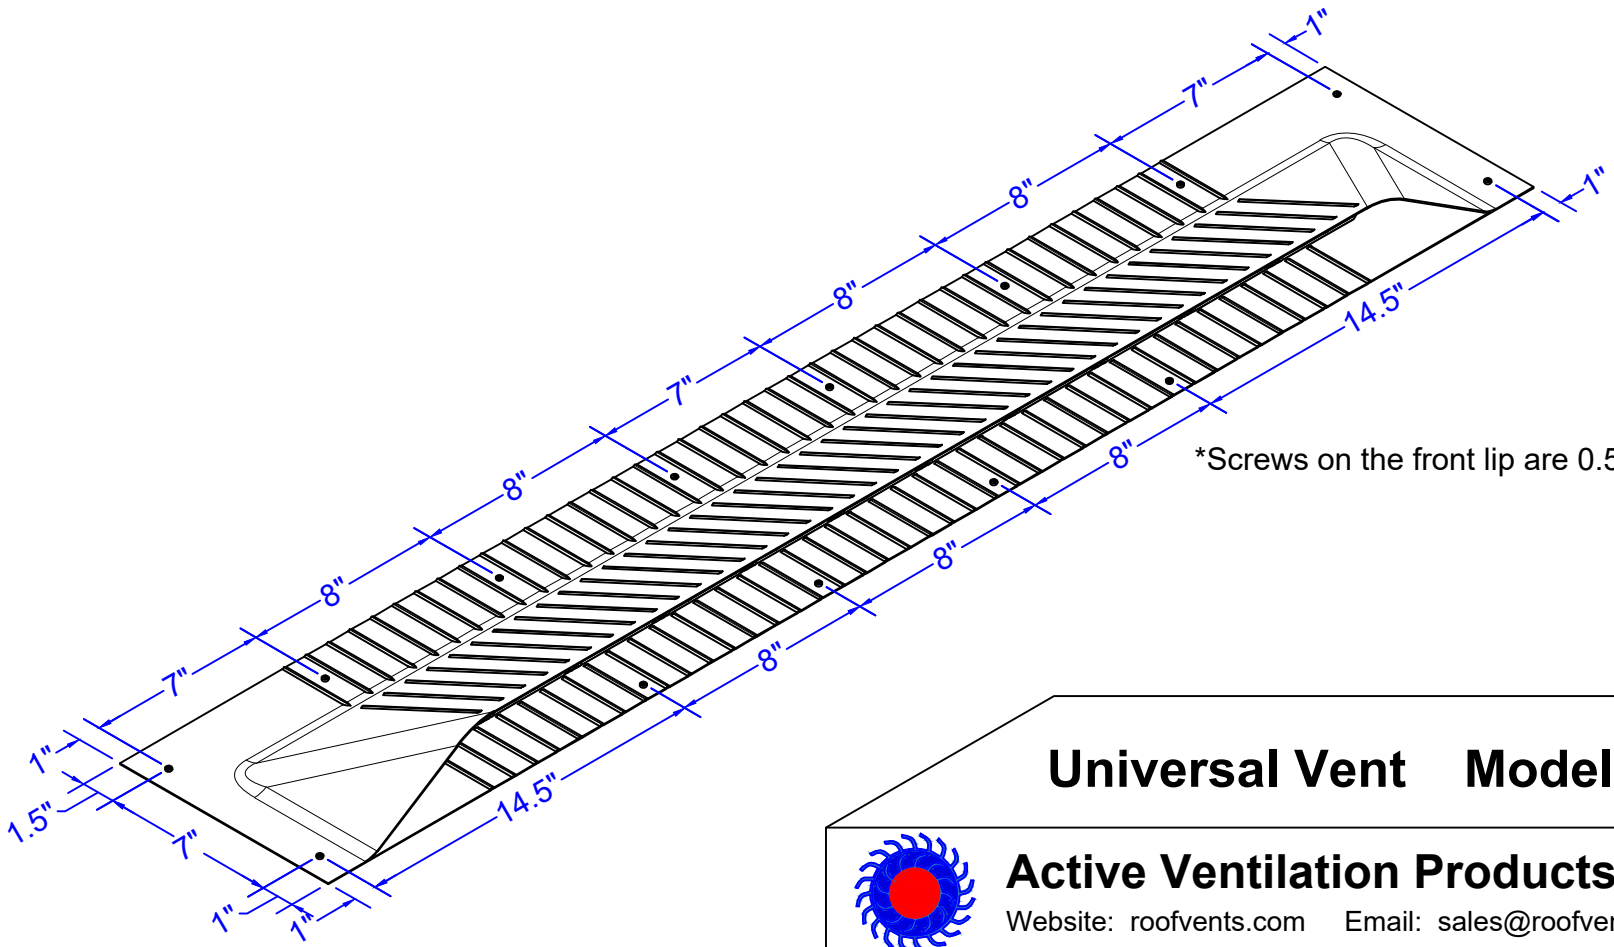

*Screws on the front lip are 0.5" off the edge.

Universal Vent Model: UV-75

Active Ventilation Products, Inc.

Website: roofvents.com Email: sales@roofvents.com

10/18/2021