### Step 1:

From the inside of the building, plot where the roof curb will be placed. Then, drill a pilot hole through the roof deck. Insert a carpenter pencil so it is visible from the top side of the roof deck.




#### Step 2:

Place the roof curb over where the pencil is sticking up from below. Then, use the roof curb flange as your pattern to outline the placement of the roof curb.




## Step 3:

With a marker, trace the inside of the box so that the section of the roof membrane is marked to cut.

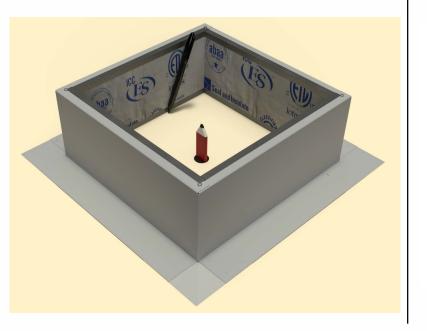

### Step 4:

Cut the membrane with a box cutter.

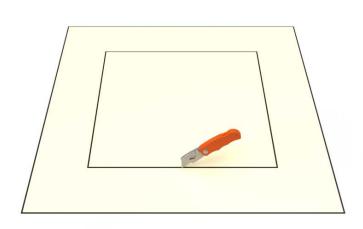



# **Active Ventilation Products, Inc.**

311 First Street, Newburgh, NY 12550-4857

800-ROOF VENT (766-3836) Ph: 845-565-7770 Fax: 845-562-8963

 5777-1


Step 5:

With a saw cut the roof deck as shown below. Do not cut roof rafters.




## Step 6:

Now place roof curb over the circular opening

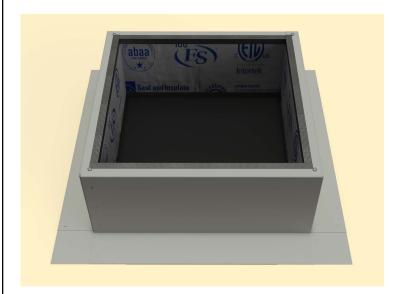


## Step 7:

Attach the roof curb to the deck with the required #10 x 1 1/2" Flat, Bugle or Wafer head screws. Use step 8 for screw pattern.

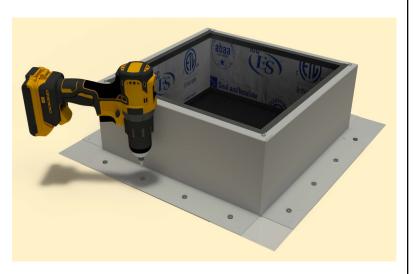

## Step 8:

Screw pattern shown below is symmetrical for all sides.

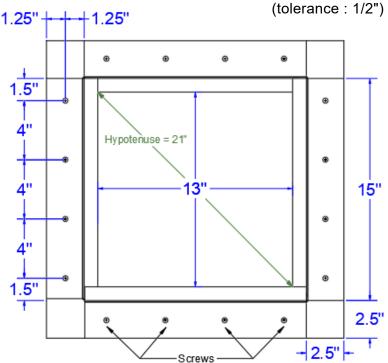



# **Active Ventilation Products, Inc.**

311 First Street, Newburgh, NY 12550-4857

800-ROOF VENT (766-3836) Ph: 845-565-7770 Fax: 845-562-8963

 5777-1


Step 9:

Apply roofing adhesive on the flange, making sure to cover all screws and the entire roof curb, except the top lip.



## **Step 10:**

Drop down the TPO boot over the roof curb.

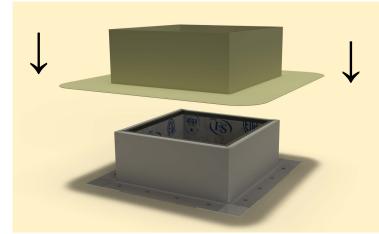


## **Step 11:**

Apply a generous amount of heat & pressure to TPO boot to weld it on to the curb & the deck.



### **Step 12:**

Install roof vent, exhaust fan or pipe cap over curb using recommended screw. See appropriate Vent with Curb Mount Flange installation instructions at roofvents.com for more details.

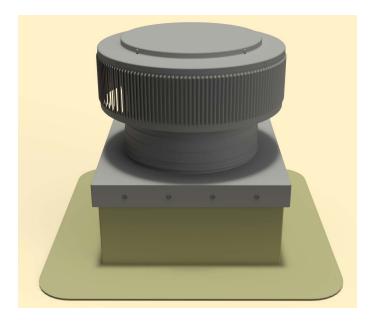



# **Active Ventilation Products, Inc.**

311 First Street, Newburgh, NY 12550-4857

800-ROOF VENT (766-3836) Ph: 845-565-7770 Fax: 845-562-8963

 5777-1